

SWALES & FILTER STRIPS Operation & Maintanence Guide

STORMWATER DEVICE INFORMATION SERIES




STORMWATER DEVICE INFORMATION SERIES

What are swales and filter strips?

Swales, also known as bioretention, filter or infiltration strips, are broad, grass channels used to treat stormwater runoff. They direct and slow stormwater across grass or similar ground cover and through the soil. Swales also help filter sediments, nutrients and contaminants from incoming stormwater before discharging to downstream stormwater system or waterways. Some swales have liners to direct filtered runoff, or rocky linings to slow fast flows. Swales are simple to maintain and can fit well in urban design.



Fig.1 Swale in Waitakere City

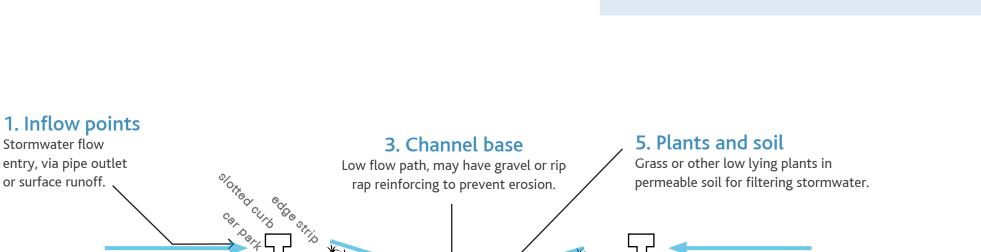

2. Side slopes

Stormwater flow entry, via pipe outlet

or surface runoff.

Total channel width. Slope less than 3:1 for mower access and to prevent scour.

4. Underdrain (if present)

draining

Usually perforated pipe, buried under channel to capture filtered flow and connected to stormwater system.

6. Outlet

Discharge point for filtered stormwater.

7. Flow controls

Check dams or spreaders, used to slow and spread flows to improve filtering. Often used

on swales with slopes over 5%.

STORMWATER DEVICE INFORMATION SERIES

Seven key components of swales and filter strips

STORMWATER DEVICE INFORMATION SERIES



Fig.2 Waitakere City Hospital car park swale

- Slotted kerbs not too close to edge of swale.
- Sign post in centre of swale are compromising underdrain.



Fig.4 Manawa Wetland vegetated swale

- Native vegetated swale following contours and overland flow paths.
- Check dams used to slow flow and allow for filtration.



- Fig.3 Henderson Valley Road – newly constructed road side swales
- Geotextile used to protect catchpit (swale outlet) during construction.

• Dish channels for each driveway controls flows and allow high flows to pass above.

MAINTENANCE SCHEDULE

STORMWATER DEVICE INFORMATION SERIES

TIMING	COMPONENT	ACTION
Following storms	Inflow points	 Check for scouring, channelling and erosion, and repair as necessary.
	Side slopes	 Check for scouring, channelling and erosion, and repair by adding soil and replanting as necessary.
	Channel base	 Check for scouring, channelling and erosion, and repair by adding soil and replanting as necessary.
	Plants and soil	 Check stormwater is filtering though soil following storm runoff. Remove weeds.
	Outlet	Check outlet for scouring or erosion and repair to suit.
Monthly	Inflow points	Remove rubbish and debris.
	Channel base	 If grassed, mow channel no shorter than 150mm length. Use catcher and remove clippings. Re-seed bare patches of grass and water in dry conditions to establish.
	Plants and soil	 If planted, check plants are healthy and growth is dense. Remove weeds. Replant gaps and water new plants in dry conditions until established.
Two yearly	Outlet	Remove rubbish and debris from outlet grate or catchpit.
	Channel base	 Check for boggy patches and ponding water. Check soil is not compacted, and aerate surface or top up dips to repair.
	Grass, plants and soil	 Remove weeds, rubbish and debris. Replant gaps and re-seed bare patches, and water if required to establish. Aerate soil to prevent natural compaction, similar to coring sportsfields and lawn bowls greens. Check stormwater is filtering though soil, by either monitoring after storm runoff or by running water across swale.

TROUBLESHOOTING

STORMWATER DEVICE INFORMATION SERIES

SYMPTOM	POSSIBLE PROBLEMS	SOLUTION
Water not draining. Ponding	Soil compacted	• Aerate soil with rotating aerator or core, as for sports fields.
onome	Soil clogged with fine sediments	 Remove top layer of soil and replace, turning soil.
	Underdrain, if present, may be blocked – check for discharge at outlet.	• Re build underdrain.
Water flowing straight to	Soil not free-draining.	• See above - aerate soil, replace top layer of soil, replace soil with free draining mix
outlet	Swale slope too steep.	• If slope over 5%, construct check dams to slow flows.
	Plants or grass not dense enough.	 Leave grass longer, and re-seed to increase density. Mow less frequently during dry periods.
Scouring / Channels appearing	Inflow concentrated at inlets.	 Remove blockages including rubbish, debris and sediment build up. Fill channels as necessary, replanting.

STORMWATER DEVICE INFORMATION SERIES

Quick maintenance check

Maintain grass length to between 50-150mm.

Avoid

On roadside swales, keep plant height below line-of-sight for motorists .

Disclaimer

This publication is provided strictly subject to Auckland Council's (AC) copyright and other intellectual property rights (if any) in the publication. Users of the publication may only access, reproduce and use the publication, in a secure digital medium or hard copy, for responsible genuine noncommercial purposes relating to personal, public service or educational purposes, provided that the publication is only ever accurately reproduced and proper attribution of its source, publication date and authorship is attached to any use or reproduction. This publication must not be used in any way for any commercial purpose without the prior written consent of AC. AC does not give any warranty whatsoever, including without limitation, as to the availability, accuracy, completeness, currency or reliability of the information or data (including third party data) made available via the publication and expressly disclaim (to the maximum extent permitted in law) all liability for any damage or loss resulting from your use of, or reliance on the publication or the information and data provided via the publication. The publication and information and data contained within it are provided on an "as is" basis.